


Nota técnica: Meriva – Como usar IP Manager

Esta nota explica cómo usar la nueva aplicación de rastreo de Meriva IP Manager.

1. Descargamos el software de la página de descargas o lo solicitamos a el área de soporte técnico.
2. Instalamos la aplicación en nuestra máquina.

3. Ejecutamos el software

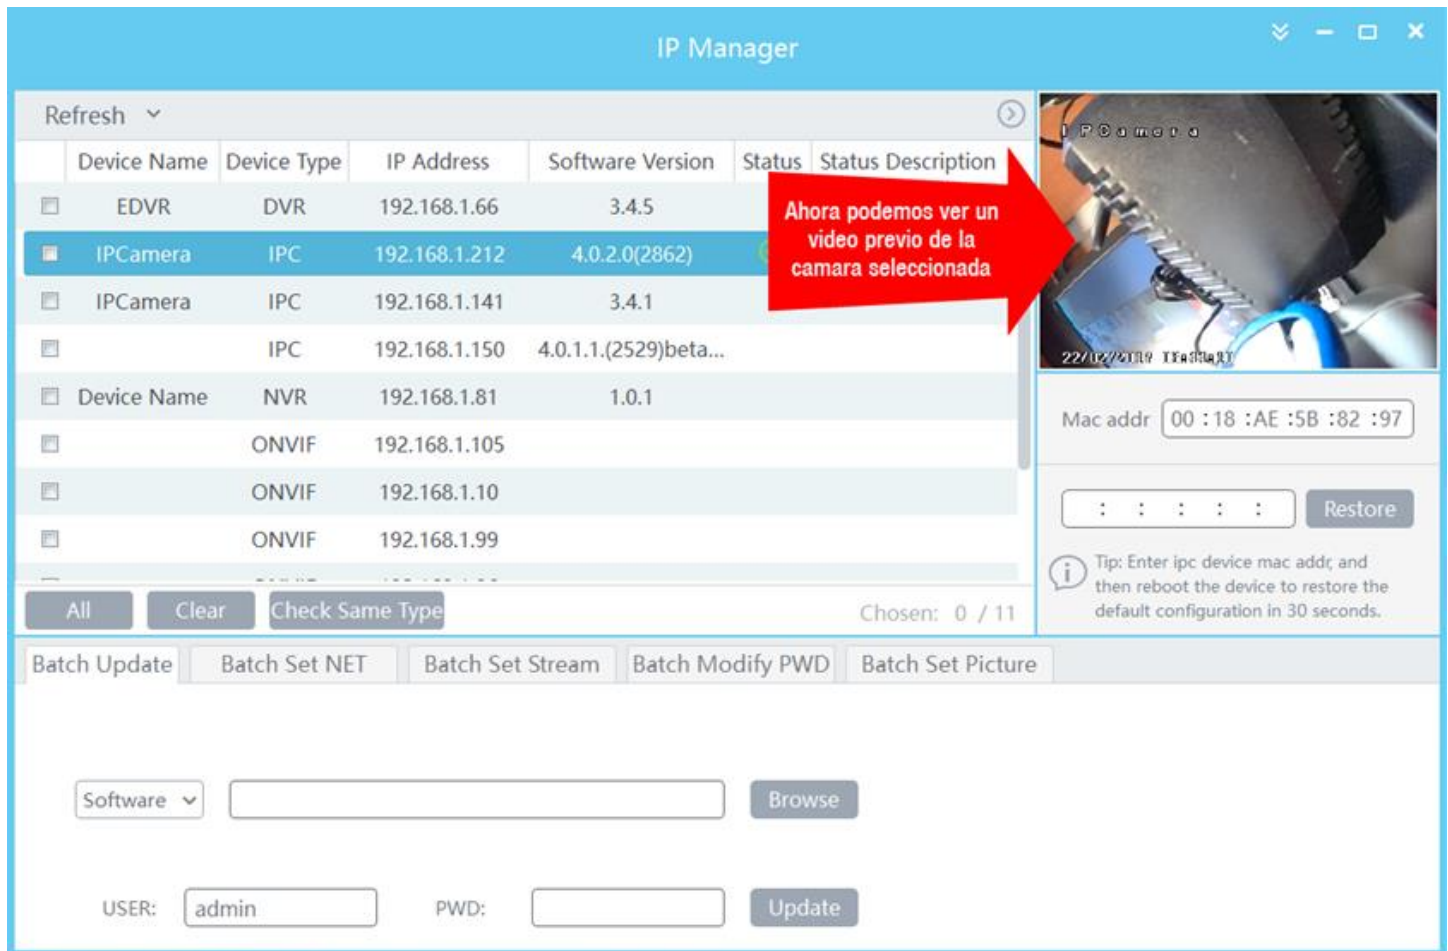

Device Name	Device Type	IP Address	Software Version	Status	Status Description
EDVR	DVR	192.168.1.66	3.4.5		
IPCámara	IPC	192.168.1.212	4.0.2.0(2862)		
IPCámara	IPC	192.168.1.141	3.4.1		
	IPC	192.168.1.150	4.0.1.1.(2529)beta...		
Device Name	NVR	192.168.1.81	1.0.1		
	ONVIF	192.168.1.105			
	ONVIF	192.168.1.10			
	ONVIF	192.168.1.99			

IP Manager

Refresh ▼
➔

	Device Name	Device Type	IP Address	Software Version	Status	Status Description
☐	EDVR	DVR	192.168.1.66	3.4.5		
☒	IPCamera	IPC	192.168.1.212	4.0.2.0(2862)	✔	Successfully
☐	IPCamera	IPC	192.168.1.141	3.4.1		
☐		IPC	192.168.1.150	4.0.1.1.(2529)beta...		
☐	Device Name	NVR	192.168.1.81	1.0.1		
☐		ONVIF	192.168.1.105			
☐		ONVIF	192.168.1.10			
☐		ONVIF	192.168.1.99			

All
Clear
Check Same Type

Chosen: 0 / 11

Batch Update
Batch Set NET
Batch Set Stream
Batch Modify PWD
Batch Set Picture

Software ▼

Browse

USER:

PWD:

Update



Mac addr 00 : 18 : AE : 5B : 82 : 97

: : : : :

Restore

Tip: Enter ipc device mac addr, and then reboot the device to restore the default configuration in 30 seconds.

Aqui podemos resetear la camara si olvidamos la contraseña

IP Manager

Refresh ▾
⌕

	Device Name	Device Type	IP Address	Software Version	Status	Status Description
☐	EDVR	DVR	192.168.1.66	3.4.5		
☒	IPCamera	IPC	192.168.1.212	4.0.2.0(2862)	✔	Successfully
☐	IPCamera	IPC	192.168.1.141	3.4.1		
☐		IPC	192.168.1.150	4.0.1.1.(2529)beta...		
☐	Device Name	NVR	192.168.1.81	1.0.1		
☐		ONVIF	192.168.1.105			
☐		ONVIF	192.168.1.10			
☐		ONVIF	192.168.1.99			

All
Clear
Check Same Type
Chosen: 0 / 11

Batch Update
Batch Set NET
Batch Set Stream
Batch Modify PWD
Batch Set Picture

Software ▾

Browse

USER:

PWD:

Update



Mac addr

Restore

Tip: Enter ipc device mac addr, and then reboot the device to restore the default configuration in 30 seconds.

Podemos configurar las camara de manera masiva si tenemos varias en una misma instalacion