


NOTA TÉCNICA


Título: Regresar a valores de fábrica los AP's.

Para lograr enviar a valores de fábrica los AP's adoptados por el software UNIFI Controller, basta con localizar el dispositivo en la sección DEVICES.

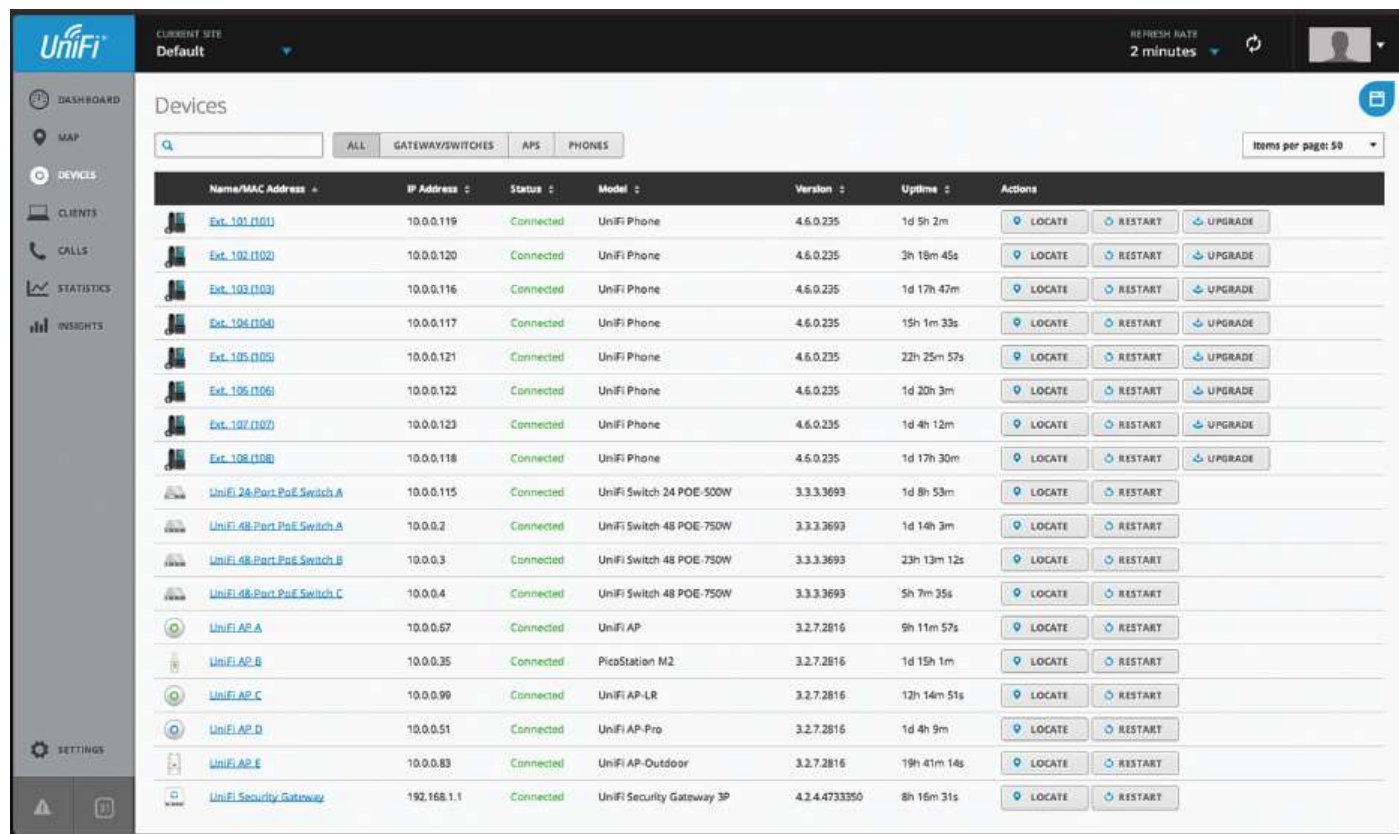

Name/MAC Address	IP Address	Status	Model	Version	Uptime	Actions
Ext_101 (101)	10.0.0.119	Connected	UniFi Phone	4.6.0.235	1d 5h 2m	LOCATE RESTART UPGRADE
Ext_102 (102)	10.0.0.120	Connected	UniFi Phone	4.6.0.235	3h 18m 45s	LOCATE RESTART UPGRADE
Ext_103 (103)	10.0.0.116	Connected	UniFi Phone	4.6.0.235	1d 17h 47m	LOCATE RESTART UPGRADE
Ext_104 (104)	10.0.0.117	Connected	UniFi Phone	4.6.0.235	15h 1m 33s	LOCATE RESTART UPGRADE
Ext_105 (105)	10.0.0.121	Connected	UniFi Phone	4.6.0.235	22h 25m 57s	LOCATE RESTART UPGRADE
Ext_106 (106)	10.0.0.122	Connected	UniFi Phone	4.6.0.235	1d 20h 3m	LOCATE RESTART UPGRADE
Ext_107 (107)	10.0.0.123	Connected	UniFi Phone	4.6.0.235	1d 4h 12m	LOCATE RESTART UPGRADE
Ext_108 (108)	10.0.0.118	Connected	UniFi Phone	4.6.0.235	1d 17h 30m	LOCATE RESTART UPGRADE
UniFi 24-Port PoE Switch A	10.0.0.115	Connected	UniFi Switch 24 POE-500W	3.3.3.3693	1d 8h 53m	LOCATE RESTART
UniFi 48-Port PoE Switch A	10.0.0.2	Connected	UniFi Switch 48 POE-750W	3.3.3.3693	1d 14h 3m	LOCATE RESTART
UniFi 48-Port PoE Switch B	10.0.0.3	Connected	UniFi Switch 48 POE-750W	3.3.3.3693	23h 13m 12s	LOCATE RESTART
UniFi 48-Port PoE Switch C	10.0.0.4	Connected	UniFi Switch 48 POE-750W	3.3.3.3693	5h 7m 25s	LOCATE RESTART
UniFi AP A	10.0.0.67	Connected	UniFi AP	3.2.7.2816	9h 11m 57s	LOCATE RESTART
UniFi AP B	10.0.0.35	Connected	PicoStation M2	3.2.7.2816	1d 15h 1m	LOCATE RESTART
UniFi AP C	10.0.0.99	Connected	UniFi AP-LR	3.2.7.2816	12h 14m 51s	LOCATE RESTART
UniFi AP D	10.0.0.51	Connected	UniFi AP-Pro	3.2.7.2816	1d 4h 9m	LOCATE RESTART
UniFi AP E	10.0.0.83	Connected	UniFi AP-Outdoor	3.2.7.2816	19h 41m 14s	LOCATE RESTART
UniFi Security Gateway	192.168.1.1	Connected	UniFi Security Gateway 3P	4.2.4.4733350	8h 16m 31s	LOCATE RESTART

Seleccionamos el dispositivo de la lista y dándole click sobre el nombre del AP, nos mostrara la siguiente ventana donde seleccionaremos la última opción **“FORGET THIS AP”**.

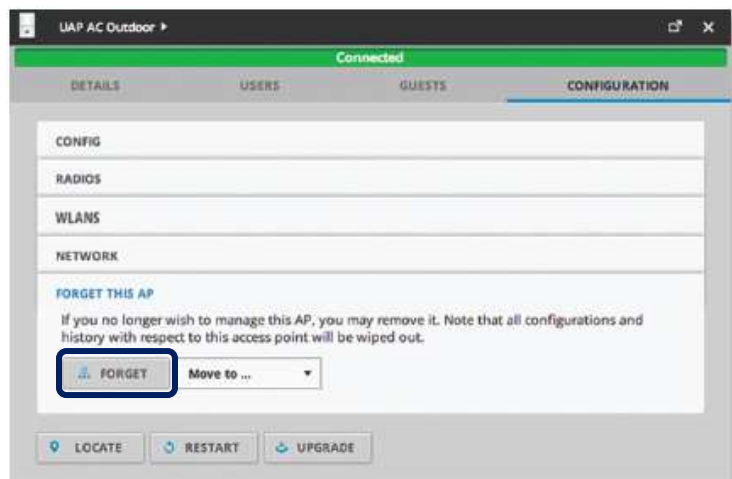

UAP AC Outdoor

Connected

DETAILS USERS GUESTS CONFIGURATION

CONFIG

RADIOS

WLANS

NETWORK

FORGET THIS AP

If you no longer wish to manage this AP, you may remove it. Note that all configurations and history with respect to this access point will be wiped out.

FORGET Move to ...

LOCATE RESTART UPGRADE

Dar click sobre el botón “Forget”, nos aparecerá la siguiente ventana de advertencia que si continuamos se perderá la administración sobre el dispositivo y ya no estará ligado al actual UNIFI Controller. Dar click en “Confirm”.

