



Como configurar un dispositivo con la aplicación móvil UniFi.

1. Una vez que haya iniciado sesión en la aplicación y haya seleccionado el controlador, seleccione **Devices** de la barra inferior. Esto le llevará a una pantalla con una lista de todos los dispositivos de su controlador. Toque un dispositivo para seleccionarlo y vaya a su pantalla de visión general, donde podrá ver su información más importante, así como localizar o reiniciar el dispositivo desde esta pantalla. También puede hacer click en **Configure** en la esquina superior derecha para hacer ajustes a este dispositivo.

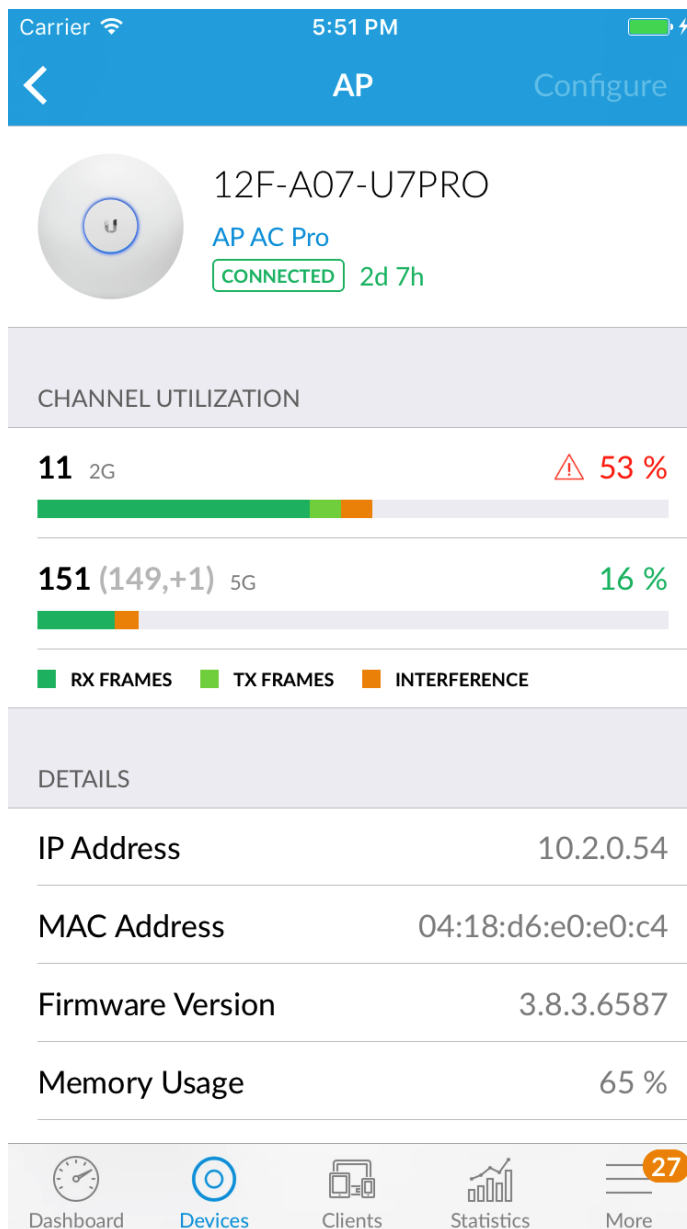


2. En la pantalla de configuración, puede cambiar el alias del dispositivo para facilitar la identificación y configurar cerca de las mismas cosas que haría en el controlador Web.

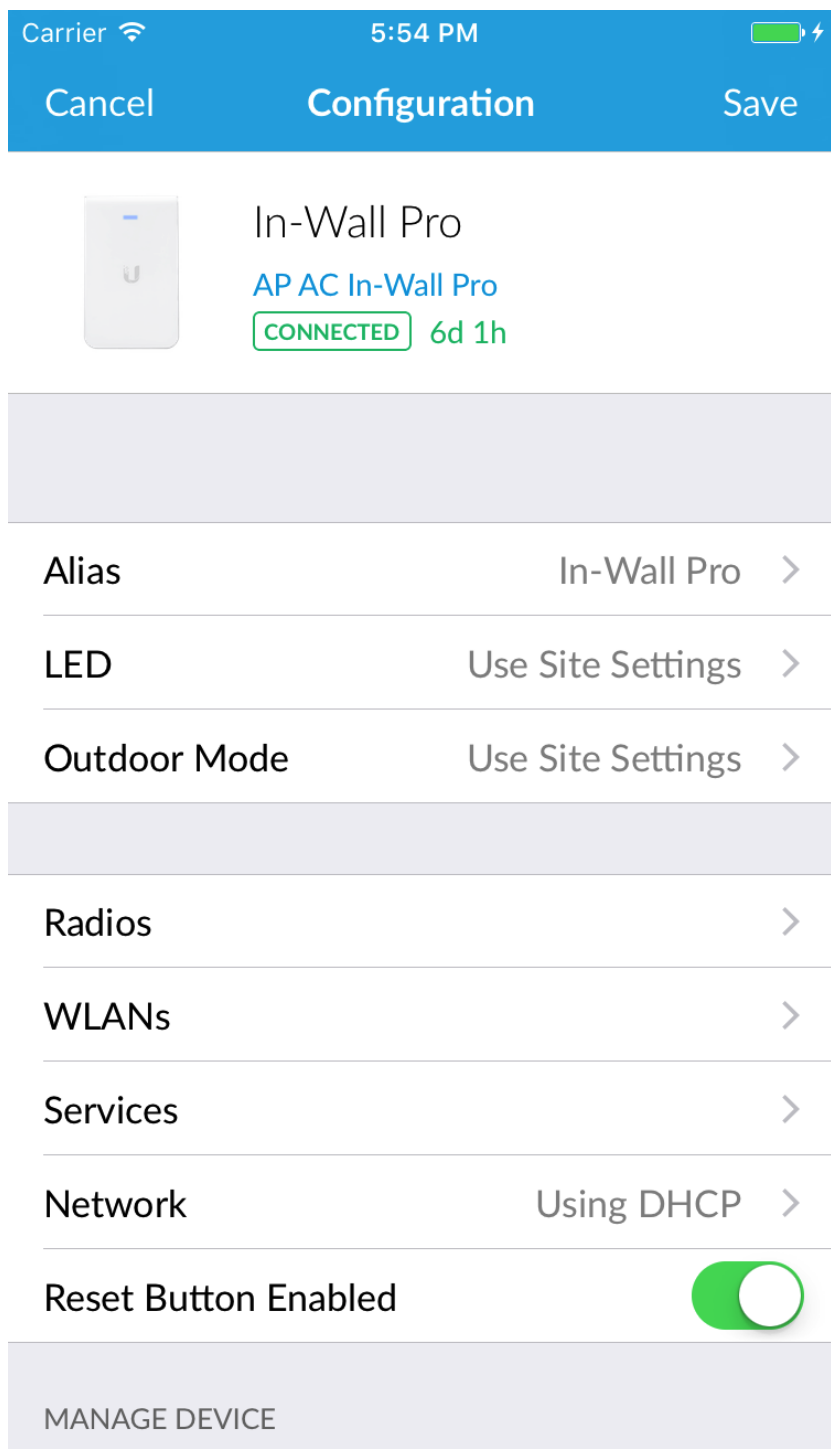

The screenshot shows a mobile configuration interface for an 'In-Wall Pro' device. At the top, there is a blue header bar with 'Carrier' and a Wi-Fi icon on the left, '5:54 PM' in the center, and a battery icon with a lightning bolt on the right. Below the header are three buttons: 'Cancel', 'Configuration', and 'Save'. The main content area features a device icon (a grey rectangle with a blue bar at the top and a 'u' symbol) to the left of the text 'In-Wall Pro'. Below this, it says 'AP AC In-Wall Pro' and 'CONNECTED 6d 1h' in a green box. A large grey bar separates this from a list of settings. The settings are: 'Alias' (In-Wall Pro >), 'LED' (Use Site Settings >), 'Outdoor Mode' (Use Site Settings >), 'Radios' (>), 'WLANs' (>), 'Services' (>), 'Network' (Using DHCP >), and 'Reset Button Enabled' (with a green toggle switch). At the bottom, there is a grey bar with the text 'MANAGE DEVICE'.

3. Desplácese más hacia abajo para acceder a la sección administrar dispositivo donde puede realizar upgrades personalizados, deshabilitar, provisionar o finalmente olvidar un dispositivo si ya no desea administrar este dispositivo. Todas las configuraciones establecidas por el controlador web o la aplicación móvil se eliminarán.

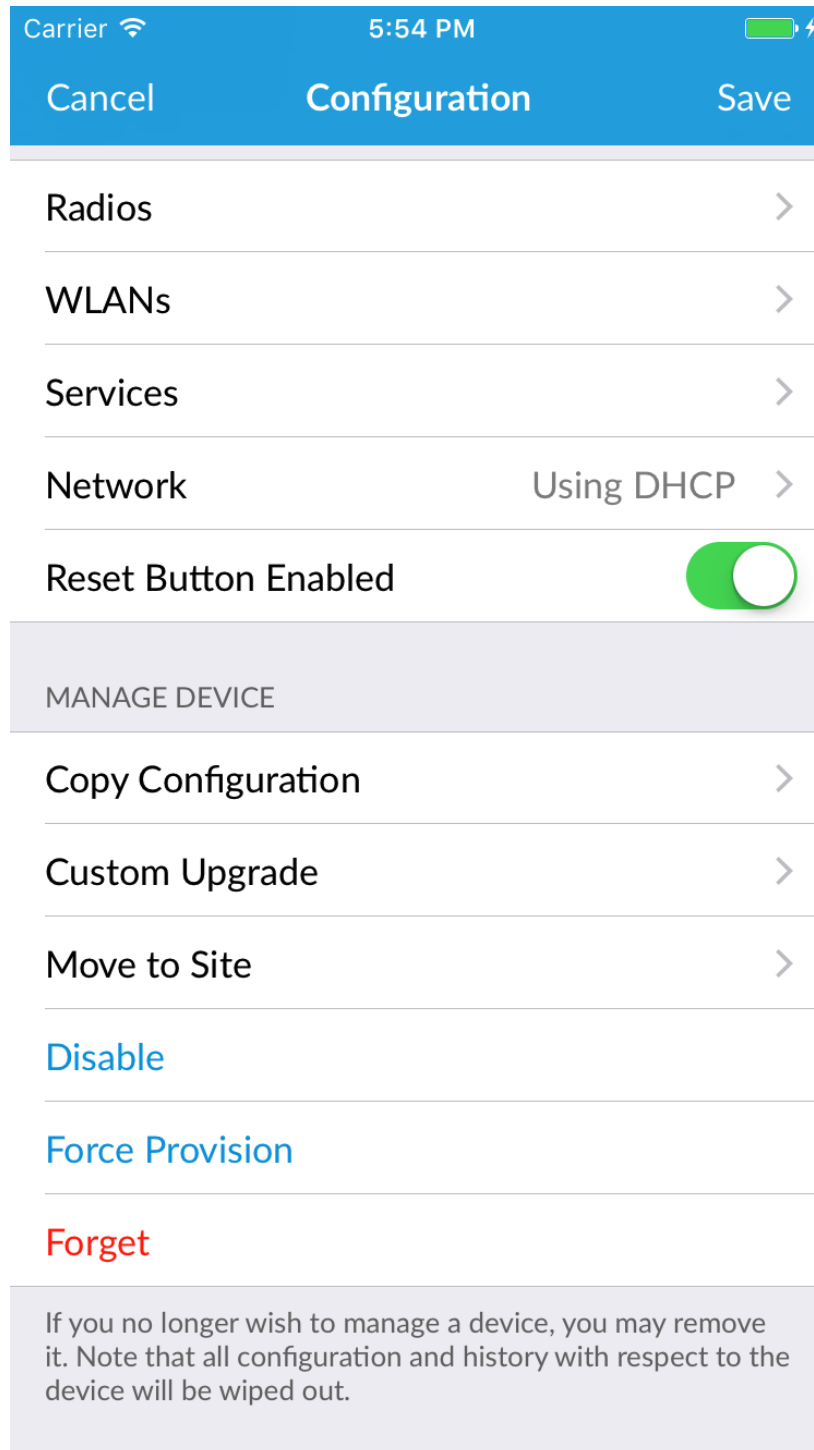

The screenshot shows a mobile application interface for device configuration. At the top, there is a blue header bar with 'Carrier' and a Wi-Fi icon on the left, '5:54 PM' in the center, and a battery icon with a lightning bolt on the right. Below the header is a blue bar with three buttons: 'Cancel', 'Configuration', and 'Save'. The main content area is a list of settings, each with a right-pointing chevron: 'Radios', 'WLANs', 'Services', 'Network' (with 'Using DHCP' to its right), and 'Reset Button Enabled' (with a green toggle switch to its right). Below this list is a grey bar with the text 'MANAGE DEVICE'. Underneath are four more options, each with a right-pointing chevron: 'Copy Configuration', 'Custom Upgrade', 'Move to Site', and 'Disable'. Below 'Disable' are two more options: 'Force Provision' and 'Forget' (in red text). At the bottom, there is a grey box containing the text: 'If you no longer wish to manage a device, you may remove it. Note that all configuration and history with respect to the device will be wiped out.'